

T-LOCK SHOE KIT INSTRUCTIONS

Items Needed for Installing T-Lock Shoe Kit:

T-LOCK SHOE KIT - #SPCK

T-Lock Shoe Inserts in 3 sizes with T-Lock Base.

Double-sided Tape

Double sided tape needed for securing shoes to the platen.


Instructions for installing T-Lock Shoe Kit:

Below are instructions for installing the T-Lock Shoe Kit.



Step 1:

Insert the T-Lock Base into the platen stem of the Brother DTG printer.

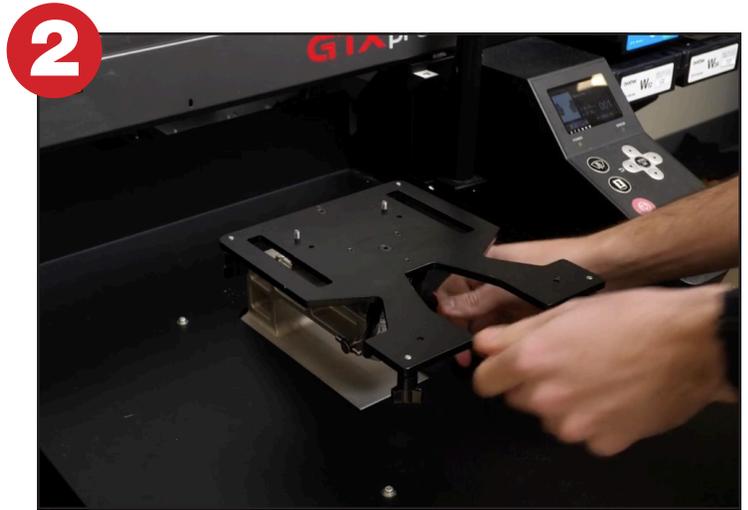


Step 2:

Adjust the height of the platen and tighten the locking lever.



Step 3:


Insert the T-Lock Shoe Insert into the T-Lock Base.

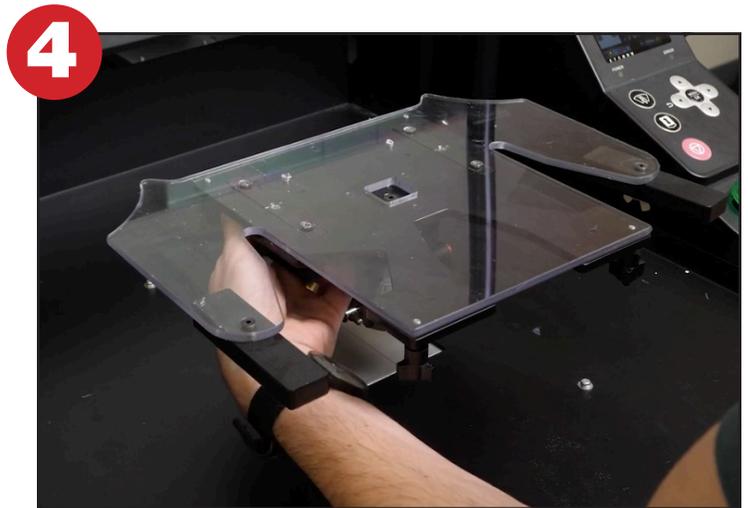

Step 4:


Secure the T-Lock Shoe Insert by rotating the center piece in the T-Lock brackets.

5

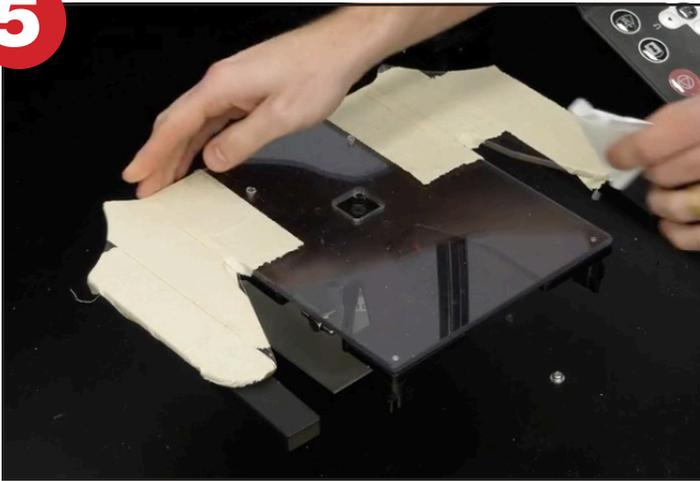

Step 5:
Apply double sided tape needed for securing shoes.

6

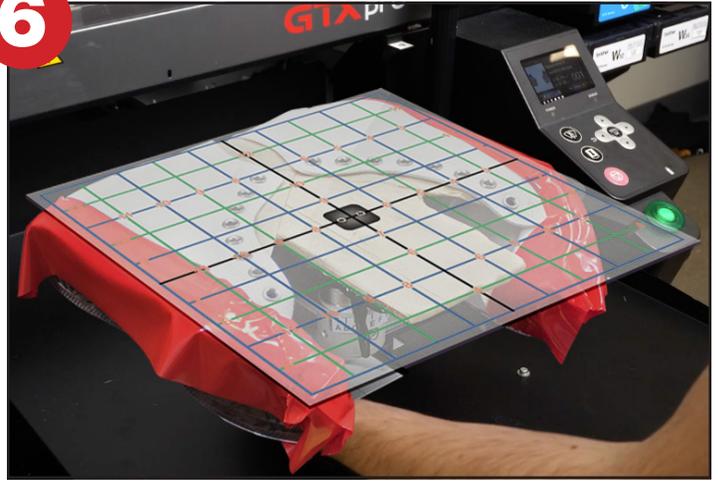

Step 6:
After loading shoes on the platen, insert the Alignment Jig in the square cut-out on the Shoe Platen insert to be able to align the artwork in your graphic software program to match up with the Alignment Jig. Remove the Alignment Jig before printing.

Click or Scan Below to View the T-Lock Shoe Insert Video

Click or Scan Below to View the GTX T-Lock Assembly Video

Video



T-Lock Shoe Insert Video
This video shows how to install and print on shoes with a T-Lock Shoe Insert.

Video



GTX T-Lock Assembly Video
Learn how to assemble the T-Lock base.